


BT L 2000, L 2300, L 2000-U and L 2300-U Hydraulic Unit

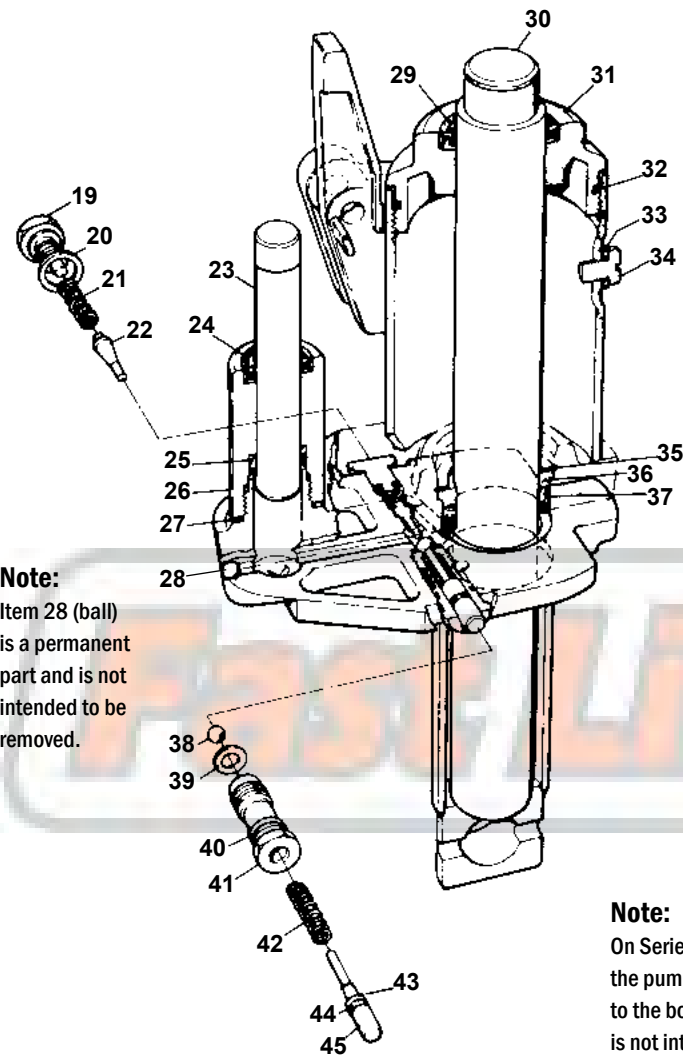


Note:
See page 55 for replacement
brake assembly parts.

Note:
On Series 10 & higher pallet jacks:
the pump cylinder item 26 is welded
to the body of the hydraulic unit and
is not intended to be removed.

Note:
Open hub steer wheels do not require a snap ring
and spacer, items 47 and 49. These parts are only
necessary when ordering closed hub nylon wheels.

How to install the closed hub steer wheel:
1. Slide the large snap ring, bearing, spacer and the remaining
bearing onto the axle. Secure in place with small snap ring.
2. Carefully hammer the wheel onto the bearing
assembly with a rubber or nylon mallet. Insert
large snap ring into the groove on the inside of
the hub of the steer wheel to secure in place.

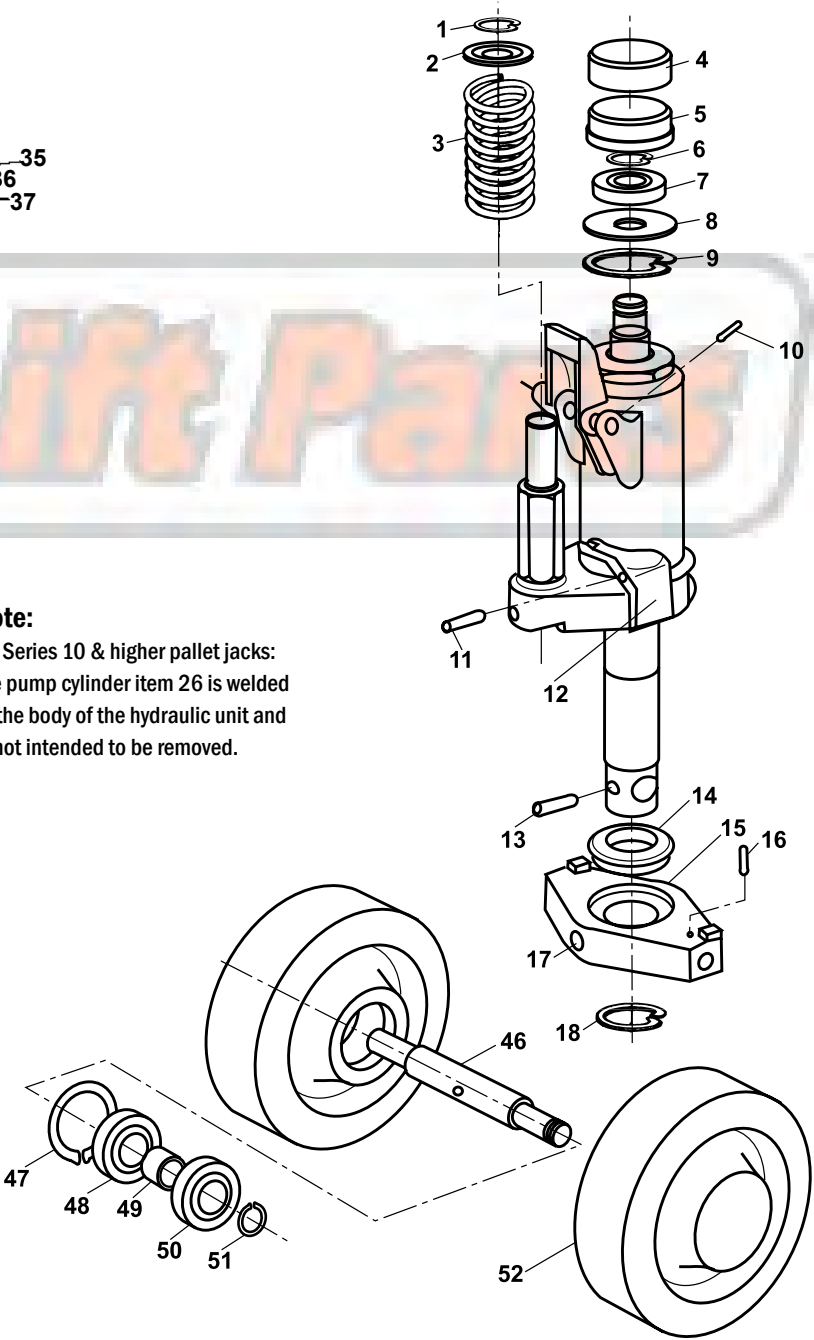

Upgrade Your Steer Wheels!
Try Our Aluminum Hub/Ultra-Poly Tread Wheels

BT L 2000, L 2300, L 2000-U and L 2300-U Hydraulic Unit

Item	Part No.	Description
1	20043	Snap Ring
2	47450	Washer
3	65245	Spring
4	47997	Insert
5	47996	Bearing Cap, Steel
	164675	Bearing Cap (Series 12), Nylon
6	20041	Snap Ring
7	20018	Bearing
8	47995	Washer
9	20076	Snap Ring
10	20071	Roll Pin
11	A B 20104	Roll Pin
12	47070	Release Lever
13	20868	Roll Pin
14	22052	Traverse Bearing
15	47092	Traverse
16	20001	Roll Pin
17	20026	Grease Fitting (Threaded)
18	20011	Snap Ring
19	43713	Screw Plug
20	ABCF 37218	Washer
21	A B 39106	Spring
22	A B 47049	Valve
23	47043	Piston
	130168	Piston (Series 10, 11 and 12)
24	ABCD 21060	Scraper
25	ABCD 21065	U-Cup (Series 10)
	ABCD 22033	U-Cup
26	47042	Pump Cylinder
27	ABCD 47044	Washer
28	N/A	Ball (Do Not Remove)
29	ABCE 20066	Scraper
30	47985	Ram
31	47037	Top Nut
32	ABCE 21024	O-Ring
33	ABCE 21742	Washer
34	20345	Filler Plug
35	A B 20101	Snap Ring
36	A B 47039	Bushing
37	ABCE 22034	U-Cup
38	ABCF 20065	Ball
39	ABCF 47050	Washer
40	ABCF 22032	O-Ring
41	A 129209	Release Pin Guide

Item	Part No.	Description
42	A B 47071	Spring
43	A B 49513	Spring Guide
44	ABCF 22318	Scraper
45	A B 47051	Release Pin
46	47144	Steer Wheel Axle
47	20923	Snap Ring
48	22123	Bearing
49	47149	Spacer
50	20332	Bearing
51	20019	Snap Ring
52	102665-A	Steer Wheel Assembly, Nylon W/ Bearings, Closed Hub
	160422-HD	Steer Wheel Assembly, Red Ultra-Poly On Aluminum Hub W/ Bearings
	160422-ST	Steer Wheel Assembly, Black Poly On Nylon Hub W/ Bearings
	160421	Steer Wheel Assembly, Nylon W/ Bearings
	160433	Steer Wheel Assembly, Steel W/ Bearings
	GWK-BTL-CK	Complete Wheel Kit, 3-1/4" Diameter, (2) Load Roller Assembly, (2) Steer Wheel Assembly W/ Bearings, Axles and Fasteners, Open Hub
	GWK-BTU-CK	Complete Wheel Kit, 2.9" Diameter (2) Ultra-Poly Load Roller Assemblies (70D), (2) Poly Steer Wheel Assemblies, W/ Bearings, Axles & Fasteners
53	65245-KIT	Return Spring Kit (Includes Items 1, 2 and 3)
KITS A	129883-SUPER	Super Seal Kit
KITS B	129883	Complete Seal Kit
KITS C	129883-SLIM	Slim Seal Kit
KITS D	130784	Pump Cylinder Kit
KITS D	22306	Pump Cylinder Kit
KITS E	129881	Lift Cylinder Kit
KITS F	129882	Valve Packing Kit
	HU BTL 2000	Rebuilt Hydraulic Unit - Exchange
	BT 131866-AM	New After Market Hydraulic Unit

